

TYPE WIRE	FROM	TO	FROM	TO
59.	WI151-1	12	A-B-C } BA71	C-A-D AUDIO DIV. P5
60.	"	12	E-F-D } OUTPUT (1,2,	H-E-J "
61.	"	12	K-J-H } 3) P1363	M-K-N "
62.	"	13	A-B-C } BA71	S-P-T "
63.	"	13	E-F-D } OUTPUT (4,5,	W-U-X "
64.	"	13	K-J-H } 6) P1365	a-Y-b "
65.	"	18	A-B-C } BA71 OUTPUT	e-c-f "
66.	"	18	E-F-D } (7,8) P1367	k-h-m "
67.	"	16	3-2-1 AG500 No. 3	DD-BB-EE "
68.	"	17	OUTPUT	B-F-L "
69.	"	24	3-2-1 AG500 No. 4	R-V-Z "
70.	"	24	OUTPUT	d-j-p AUDIO DIV. P5
71.	"	24	R-V-Z AJP P1355-4	3-2-1 AG500 No. 3
		14	C-A-D AJP P1328-5	INPUT "A"
		16	S-P-T AJP P1328-5	AG500 No. 4
72.	WI151-1	24	W-U-X AJP P1328-5	INPUT "A"
		17		AG500 No. 4
				INPUT "A"
				XLR3-11C
				XLR3-11C
				XLR3-12C
				XLR3-12C