

TECHNICAL MANUAL

FOR
10KW HF/ISB TRANSMITTER
HFT-10K
SERIES/JS

PUBLICATION NUMBER

120-021200-003

ISSUE DATE

1 SEP. 1978

THE TECHNICAL MATERIEL CORPORATION

CABLE: TEPEI

700 FENIMORE ROAD, MAMARONECK, NY 10543 U.S.A.
TEL: 914-698-4800

TLX: 137-358

TWX: 710-566-1100

TMC (CANADA) LIMITED

TMC INTERNATIONAL

RR No. 5, Ottawa K1G 3N3 Ontario CANADA

TEL. 613-521-2050

TLX: 053-4146

NOTICE

THE CONTENTS AND INFORMATION CONTAINED IN THIS INSTRUCTION MANUAL IS PROPRIETARY TO THE TECHNICAL MATERIEL CORPORATION TO BE USED AS A GUIDE TO THE OPERATION AND MAINTENANCE OF THE EQUIPMENT FOR WHICH THE MANUAL IS ISSUED AND MAY NOT BE DUPLICATED EITHER IN WHOLE OR IN PART BY ANY MEANS WHATSOEVER WITHOUT THE WRITTEN CONSENT OF THE TECHNICAL MATERIEL CORPORATION.

RECORD OF REVISIONS

NO.	ISSUED	DESCRIPTION	ENTERED	BY
001				
002	10-4-79	UPDATING		
003	10-6-80	pg. 6-10 No. Changed pg.6-16 revised	21848	RU
004				
005				
006				
007				
008				
009				
010				

NOTE: Please file Technical Newsletters at back of manual for permanent record.



THE TECHNICAL MATERIEL CORPORATION

C O M M U N I C A T I O N S E N G I N E E R S

700 FENIMORE ROAD

MAMARONECK, N. Y.

W a r r a n t y

The Technical Materiel Corporation, hereinafter referred to as TMC, warrants the equipment (except electron tubes, *fuses, lamps, batteries and articles made of glass or other fragile or other expendable materials) purchased hereunder to be free from defect in materials and workmanship under normal use and service, when used for the purposes for which the same is designed, for a period of one year from the date of delivery F.O.B. factory. TMC further warrants that the equipment will perform in a manner equal to or better than published technical specifications as amended by any additions or corrections thereto accompanying the formal equipment offer.

TMC will replace or repair any such defective items, F.O.B. factory, which may fail within the stated warranty period, PROVIDED:

1. That any claim of defect under this warranty is made within sixty (60) days after discovery thereof and that inspection by TMC, if required, indicates the validity of such claim to TMC's satisfaction.
2. That the defect is not the result of damage incurred in shipment from or to the factory.
3. That the equipment has not been altered in any way either as to design or use whether by replacement parts not supplied or approved by TMC, or otherwise.
4. That any equipment or accessories furnished but not manufactured by TMC, or not of TMC design shall be subject only to such adjustments as TMC may obtain from the supplier thereof.

Electron tubes furnished by TMC, but manufactured by others, bear only the warranty given by such other manufacturers. Electron tube warranty claims should be made directly to the manufacturer of such tubes.

TMC's obligation under this warranty is limited to the repair or replacement of defective parts with the exceptions noted above.

At TMC's option any defective part or equipment which fails within the warranty period shall be returned to TMC's factory for inspection, properly packed with shipping charges prepaid. No parts or equipment shall be returned to TMC, unless a return authorization is issued by TMC.

No warranties, express or implied, other than those specifically set forth herein shall be applicable to any equipment manufactured or furnished by TMC and the foregoing warranty shall constitute the Buyers sole right and remedy. In no event does TMC assume any liability for consequential damages, or for loss, damage or expense directly or indirectly arising from the use of TMC Products, or any inability to use them either separately or in combination with other equipment or materials or from any other cause.

*Electron tubes also include semi-conductor devices.

PROCEDURE FOR RETURN OF MATERIAL OR EQUIPMENT

Should it be necessary to return equipment or material for repair or replacement, whether within warranty or otherwise, a return authorization must be obtained from TMC prior to shipment. The request for return authorization should include the following information:

1. Model Number of Equipment.
2. Serial Number of Equipment.
3. TMC Part Number.
4. Nature of defect or cause of failure.
5. The contract or purchase order under which equipment was delivered.

PROCEDURE FOR ORDERING REPLACEMENT PARTS

When ordering replacement parts, the following information must be included in the order as applicable:

1. Quantity Required.
2. TMC Part Number.
3. Equipment in which used by TMC or Military Model Number.
4. Brief Description of the Item.
5. The *Crystal Frequency* if the order includes crystals.

PROCEDURE IN THE EVENT OF DAMAGE INCURRED IN SHIPMENT

TMC's Warranty specifically excludes damage incurred in shipment to or from the factory. In the event equipment is received in damaged condition, the carrier should be notified immediately. Claims for such damage should be filed with the carrier involved and not with TMC.

All correspondence pertaining to Warranty Claims, return, repair, or replacement and all material or equipment returned for repair or replacement, within Warranty or otherwise, should be addressed as follows:

THE TECHNICAL MATERIEL CORPORATION
Engineering Services Department
700 Fenimore Road
Mamaroneck, New York

PREFACE

This technical manual discusses the information you will require to install, operate and maintain the HFT-10K/JS High Frequency Transmitter. This manual is intended for operators and technicians who will be responsible for the proper functioning of the equipment.

This text is compiled in three parts:

HFT-10K/JS	Transmitter System	Part I
MMX-2B	Multi-Mode Exciter.	Appendix A
HFL-10K	High Gain Linear Power Amplifier.	Appendix B

You should read this manual in sequence, section by section, to become totally familiar with the transmitter. After completing this manual, you should be able to install, operate, and depending on your level of technical training, perform maintenance to the component level.

Changes are periodically made to this manual through publication of TECHNICAL NEWSLETTERS that are distributed to users of the equipment. The REGISTRATION CARD located at the front of this manual should be completed and sent to:

THE TECHNICAL MATERIEL CORPORATION
700 Fenimore Road
Mamaroneck, New York 10543 U.S.A.

Attention: Technical Data Group

Your name and address will be entered on permanent TMC records and applicable publications automatically mailed to you. Requests for related publications should be made to your TMC representative, to a TMC field office in your area, or to TMC at the above address.

Forms are provided at the back of this manual for your use. Included are the following: READER'S COMMENTS; REQUEST FOR SPARE PARTS; REQUEST FOR FIELD SERVICE; REQUEST FOR PUBLICATIONS; REQUEST FOR TRAINING; NOTES; and TMC LOCATION MAP.

To facilitate the maintenance of accurate records on the operation of the equipment, a SERVICE LOG and FIELD REPORT are also included.

TABLE OF CONTENTS

PART I

Paragraph		Page
	SECTION 1 - GENERAL INFORMATION	
1-1	Functional Description	1-1
1-2	Physical Description	1-1
1-3	Reference Data	
	SECTION 2 - INSTALLATION	
2-1	Initial Unpacking and Inspection	2-1
2-2	Power Requirements	2-1
2-3	Installation	2-1
2-4	Pre-Operational Check	2-1
	SECTION 3 - OPERATOR'S SECTION	
3-1	General.	3-1
3-2	Operating Controls	3-1
3-3	Starting Controls Settings	3-1
3-4	Operating Procedure.	3-1
3-5	Transmitter Carrier Tuning Procedure	3-2
3-6	Manual Tuning Procedure.	3-3
3-7	Automatic Tuning Procedure	3-8
3-8	Average Power Output Indications	3-11
	SECTION 4 - PRINCIPLES OF OPERATION	
4-1	Overall Block Diagram Analysis	4-1
4-2	Functional Assembly Sections	4-1
	SECTION 5 - MAINTENANCE AND TROUBLESHOOTING	
5-1	Introduction	5-1
5-2	Test Equipment Required	5-1
5-3	Operator's Maintenance Procedure	5-1
5-4	Preventive Maintenance	5-1
5-5	Troubleshooting	5-2

LIST OF TABLES

<u>Table</u>		<u>Page</u>
SECTION 1 - GENERAL INFORMATION		
1-1	Components of Transmitter	1-1
1-2	Technical Specifications	1-2
SECTION 3 - OPERATOR'S SECTION		
3-1	Manual Tuning Procedure (Carrier Only)	3-3
3-2	Automatic Tuning Procedure (Carrier Only)	3-8
SECTION 5 - MAINTENANCE AND TROUBLESHOOTING		
5-1	Test Equipment Required	5-1

LIST OF ILLUSTRATIONS

<u>Figure</u>		<u>Page</u>
SECTION 1 - GENERAL INFORMATION		
1-1	High Frequency Transmitter, Model HFT-10K/JS	1-0
SECTION 3 - OPERATOR'S SECTION		
3-1	Ratio Average Power and PEP	3-12
SECTION 4 - PRINCIPLES OF OPERATION		
4-1	Functional Block Diagram	4-1
4-2	Exciter/Amplifier Interconnect	4-2
SECTION 5 - MAINTENANCE AND TROUBLESHOOTING		
5-1	Troubleshooting Chart "A"	5-4
5-2	Troubleshooting Chart "B"	5-4
5-3	Troubleshooting Chart "C"	5-5
5-4	Troubleshooting Chart "E"	5-5
5-5	Troubleshooting Chart "D"	5-6
5-6	Component Location Diagram	5-7

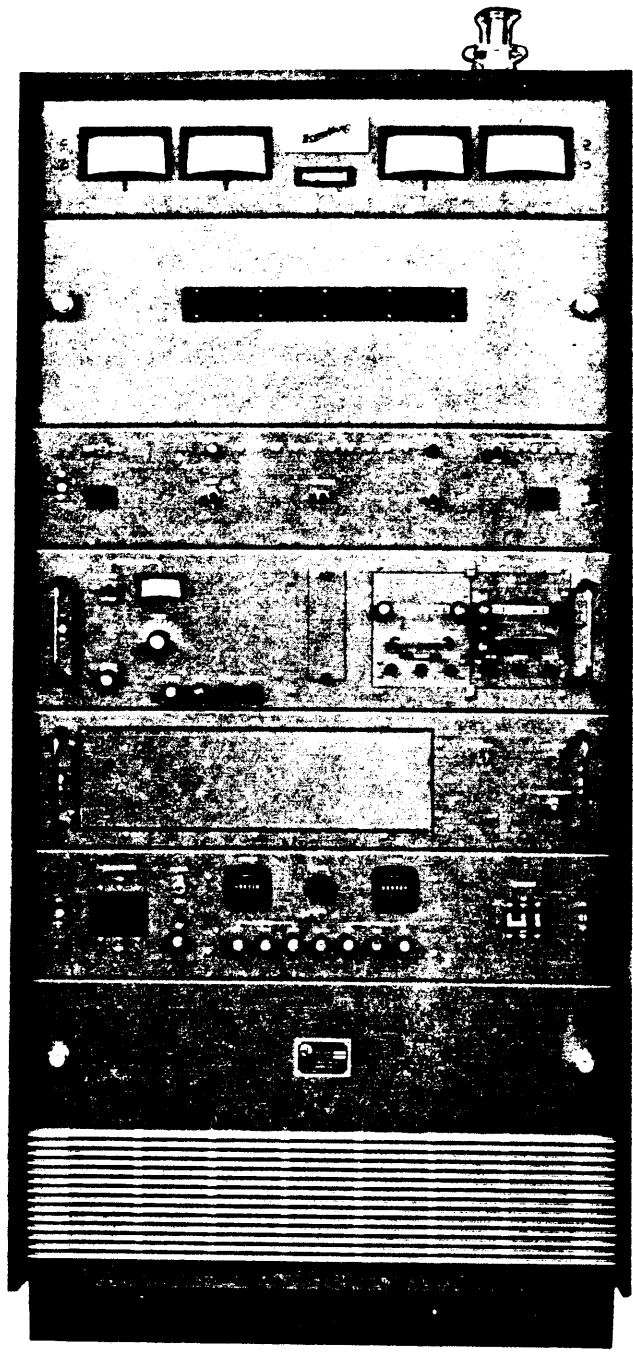
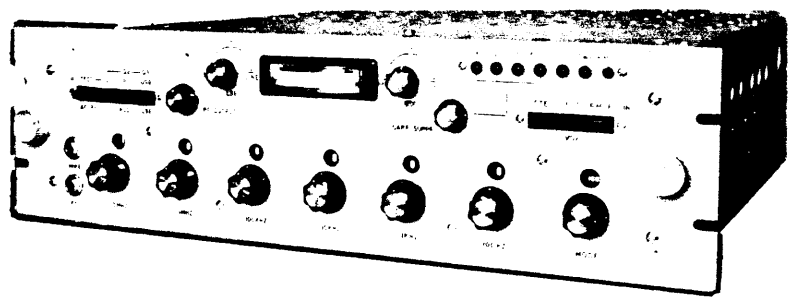


Figure 1-1. High Frequency Transmitter, Model HFT-10K/JS

SECTION 1

GENERAL INFORMATION

1-1. FUNCTIONAL DESCRIPTION

This manual presents operating and maintenance instructions for High Frequency Transmitter HFT-10K/JS designed and manufactured by the Technical Materiel Corporation, Mamaroneck, New York. This manual includes a general description of the equipment; installation and operating procedures; principles of operation; maintenance and troubleshooting data; and a parts list.

The High Frequency Transmitter HFT-10K/JS, hereinafter referred to as the transmitter (figure 1-1), consists of a solid state, multi-mode, exciter MMX-2B, used in conjunction with high frequency linear power amplifier HFL-10K. The exciter is capable of providing CW (continuous wave), AM (amplitude modulated equivalent) full carrier, FSK (frequency shift keyer), FAX (facsimile) and optional ISB (independent sideband) modes of operation. The high frequency linear power amplifier amplifies the exciter output to provide 10 kilowatts (PEP) and average throughout the frequency range of 2 to 30 MHz. The transmitter is readily adaptable for shipboard, aircraft, and land installations. Table 1-1 lists the transmitter components.

TABLE 1-1. COMPONENTS OF TRANSMITTER HFT-10K/JS

<u>NOMENCLATURE</u>	<u>COMMON NAME</u>
MMX-2B Series	Multi-Mode Exciter
HFL-10K	High Frequency Linear Power Amplifier

1-2. PHYSICAL DESCRIPTION

The transmitter consists of a single cabinet, 68-3/4 inches high by 33-1/2 inches wide by 38-3/4 inches deep, which houses all the components which comprise the HFL-10K power amplifier in addition to the MMX-2B exciter. The HFT-10K/JS consists of a main meter panel, a power amplifier, an IPA drawer, an exciter drawer, a main power panel, a main power supply, and an optional harmonic filter. Primary power connections are made through the access hole on the base assembly. External exciter transmitter control connections are made to the exciter remote assembly. Transmitter r-f power is routed through a directional coupler mounted in the opening located on top of the transmitter.

1-3. REFERENCE DATA

Table 1-2 lists the technical specifications of the equipment.

TABLE 1-2. TECHNICAL SPECIFICATIONS

FREQUENCY RANGE:	2 to 30 mHz.
OPERATING MODES:	SSB, ISB, CW, AM, FSK and FAX.
POWER OUTPUT:	10,000 watts 2 tone PEP with signal to distortion 35 db. 10 kw average.
OUTPUT IMPEDANCE:	50 ohms unbalanced with 3:1 vswr EIA flange for 1-5/8 inch coaxial
STABILITY AND FREQUENCY CONTROL:	1 part in 10^8 per day for ambient change of 15° C within the range of $0-50^{\circ}$ C (using exciter internal standard)
TUNING:	Automatic or manual. Automatic has manual override.
REMOTE OPERATION:	Facilities for remote operation including mode, frequency, power level and readback available.
SPURIOUS SIGNALS:	At least 60 db below full PEP output.
HARMONIC SUPPRESSION:	Second harmonic at least 50 db down from PEP output. Third harmonic at least 65 db down from PEP output.
HARMONIC FILTERS:	Available fixed for all frequencies above 30 mHz or bandswitched for lower frequencies. Resultant harmonics conform to latest requirements.
AUDIO INPUT:	<ol style="list-style-type: none"> 1. For ISB, 2 independent 600-ohm channels balanced or unbalanced, -20 dbm to +5 dbm. 2. Mike input for low level dynamic mike with front panel selection; -55 db into 47,000 ohms, front panel jack.

TABLE 1-2. TECHNICAL SPECIFICATIONS (cont)

METERING:	Meters with special illuminated overload protection.
NOISE:	Power supply ripple 55 db down from full PEP output. Other 70 db down--special "white noise" protection.
COOLING:	Filtered forced air cooling semi-pressurized cabinet.
ENVIRONMENTAL:	Designed to operate in any ambient temperature between the limits of 0 and 50°C for any value of humidity to 90%.
SPECIAL FEATURES:	Adjustable power output levels with overload and bias protection, and alarm. Controlled and adjustable ALDC. Safety interlocks at all high voltage points.
PRIMARY POWER:	208 volts, 400 Hz, 3 phase, Delta or Wye. 230 volts, 60 Hz.
POWER REQUIREMENTS:	Maximum 27,000 watts. All solid state power supply.
SIZE:	33-1/2 inches wide x 38-3/4 inches deep x 68-3/4 inches high standard.
INSTALLED WEIGHT:	Approximately 1300 pounds.
SHIPPING WEIGHT:	Approximately 1660 pounds.
SIZE OF LARGEST SHIPPING CONTAINER:	43 inches wide x 49 inches long x 81 inches high
COMPONENTS AND CONSTRUCTION	Manufactured in accordance with JAN/MIL wherever practicable.

SECTION 2

INSTALLATION

2-1. INITIAL UNPACKING AND INSPECTION

The HFT-10K/JS was assembled, calibrated, and tested at the factory before shipment. Inspect all packages for possible damage during transit. With respect to damage to the equipment for which the carrier is liable, The Technical Materiel Corporation will assist in describing methods of repair and furnishing of replacement parts. Carefully unpack each crate as indicated by the packing list provided with the transmitter shipment. Inspect all packing materials for parts that may have been shipped as loose items (cabinet hardware, connectors, technical manuals, etc.).

2-2. POWER REQUIREMENTS

The transmitter requires a three phase source voltage of 208 VAC, 400 Hz, and 230 VAC, 60 Hz.

2-3. INSTALLATION

A minimum number of assemblies, subassemblies, components and hardware have been disassembled from the equipment and separately packaged, thus reducing the possibility of equipment damage in transit. The method of disassembly and separate packaging also permits realistic equipment handling.

Cables, wires, and other miscellaneous items that are disconnected during equipment disassembly are tagged and taped to the equipment. The information on a given tag indicates the designated terminal on a component to which the tagged item must be connected. Make sure all cables and wires have been connected as designated on tags and that all packing material, tags, and tape have been removed before sealing up the cabinet or section of the cabinet with a front panel drawer.

Refer to Appendix B of the MMX-2B for the HFL-10K Linear Power Amplifier for detailed procedural steps required to install components in the equipment cabinet. Connect the MMX-2B to the HFL-10K using appropriate cables. With the unit fully assembled, install the cabinet in the desired location, leaving a minimum two-foot clearance on the top and all sides for maintenance and installation purposes.

2-4. PRE-OPERATIONAL CHECK

Although the transmitter has been aligned and thoroughly check against the manufacturer's specifications prior to shipment, it is necessary to ensure correct installation and proper operation by referring to the applicable Appendices to perform the transformer checks of the HFL-10K and initial check-out of the MMX-2B.

SECTION 3

OPERATOR'S SECTION

3-1. GENERAL

The controls of the MMX-2B provide rapid transmitter r-f frequency selection of AM, USB, LSB or ISB (optional) intelligence in the 2 to 30 mHz. transmission range. Tuning is accomplished manually or automatically.

3-2. OPERATING CONTROLS

For detailed functions of all operating controls and indicators of the HFT-10K/JS, refer to the applicable HFL-10K and MMX-2B Appendicies.

3-3. STARTING CONTROLS SETTINGS

Generally, before main power is applied, all operating controls should be set to OFF or maximum counterclockwise position. Set the MMX-2B ON/STANDBY switch to STANDBY. Starting control settings are provided in the operating procedures presented in paragraphs 3-6 and 3-7.

3-4. OPERATING PROCEDURE

a. GENERAL. An extensive interlock and overload system is designed into the transmitter. However, a single incorrect control setting could overload certain components, resulting in equipment malfunctioning.

A definite operating sequence as outlined in this manual should be rigidly followed. Once the operating technique is mastered, it should be consistently followed to ensure continuing proper operation of the equipment and prevent possible malfunctions.

Before applying power to the transmitter, check that antenna or dummy load connections are properly made.

b. TUNING CONSIDERATIONS:

1. GENERAL. Before the transmitter is tuned for any specified mode of operation, it should be initially tuned and loaded on a carrier frequency. This procedure should be followed, even if suppressed carrier operation is desired. After the transmitter is tuned to the carrier frequency, either or both sidebands are generated by applying the proper modulating signals required by the particular mode of operation. The carrier level may then be reinserted or bypassed, as desired.

2. CARRIER FREQUENCY VERSUS ASSIGNED FREQUENCY. When operating in certain modes, the carrier frequency may be significantly different than the assigned frequency, and will therefore affect the choice of frequency to be selected in the exciter. Carrier frequency is defined as that position in the r-f spectrum reserved for the carrier, whether or not the carrier is present. The assigned frequency is a reference frequency designed to identify or reserve a given portion of the r-f spectrum.

Most government agencies define the assigned frequency as the center of a frequency band assigned to a station. The assigned frequency and the carrier frequency may or may not be the same. In practice, the assigned frequency is often suffixed by the carrier frequency in parenthesis for clarification.

EXAMPLE 1 - For an upper sideband transmission, with the carrier completely suppressed and with a total r-f bandpass extending from 300 Hz above F_c (carrier frequency) to 3 kHz, the assigned frequency is 1650 Hz above the non-existent carrier frequency.

EXAMPLE 2 - For an ISB (independent sideband) transmission, with audio intelligence covering 350 - 7500 Hz per sideband, with or without carrier suppression, the assigned frequency and the carrier frequency are one and the same with both occupying the center of the transmitted spectrum.


3. PEAK ENVELOPE POWER VERSUS AVERAGE POWER INDICATION. A common misapprehension continues to exist over the ratio between average and PEP (peak envelope power) in high-power transmitters, particularly when multi-channel (multitone) transmissions are used. The PEP during modulation can be many times that of the average power indicated on the HFT-10K/JS PA OUTPUT meter. Thus, the transmitter average power must be reduced sufficiently to avoid a serious peak overload to the transmitter, with consequent flat-topping and possible damage.

3-5. TRANSMITTER CARRIER TUNING PROCEDURE

The operational procedure presented in paragraph 3-6 contains the manual tuning procedure wherein all operating controls are adjusted by the operator. Paragraph 3-7 contains the automatic tuning procedure that is accomplished once the transmitter has been satisfied with all signal and voltage inputs required for automatic tuning. The numbers in parenthesis following each operating control and indicator locate the controls and indicators in the associated technical front panel illustration.

CAUTION

In the automatic mode of operation, the HFL-10K cannot perform the automatic bandswitching function unless properly interfaced with the appropriate exciter, such as the MMX-2B. Without an MMX-2B, bandswitching must be performed manually prior to starting the automatic tuning cycle (as indicated in the manual tuning procedure).

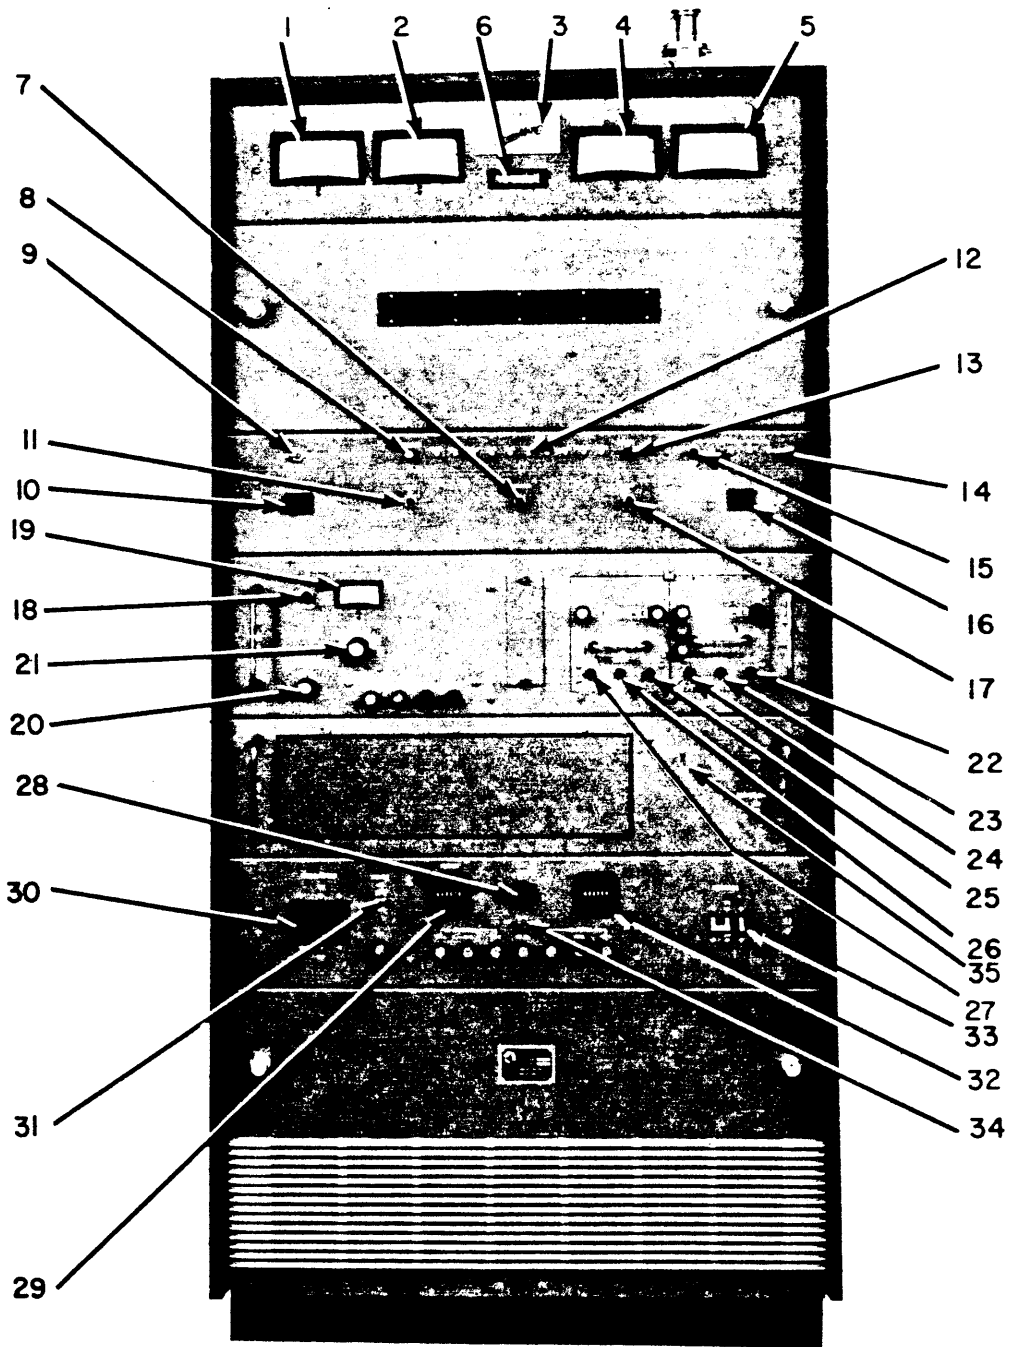

Controls And Indicators

3-6. MANUAL TUNING PROCEDURE

The manual tuning procedure (carrier only) for the HFT-10K/JS transmitter is outlined in Table 3-1.

TABLE 3-1. MANUAL TUNING PROCEDURE (CARRIER ONLY)

<u>STEP</u>	<u>OPERATION</u>	<u>NORMAL INDICATIONS</u>
1	Set MAIN POWER circuit breaker (30) and EXCITER ON/OFF switch (31) to ON positions.	All transmitter blowers operate. TECHNIMATIC light (3) and PA BAND indicator (12) illuminate. STANDBY indicator on the exciter illuminates.
2	Set SCREENS circuit breaker (33) to ON.	INTERLOCK indicator (8) lights (provided that all safety interlocks are closed and the time delay cycle has been completed)
3	Set MAN/AUTO switch (9) to MAN.	No indications at this time; however, automatic tuning circuitry is disabled.
4	Set ALARM ON/OFF switch (34) to OFF.	If ALARM ON/OFF switch had been in the ON position with high voltage removed, the audible high voltage alarm would be on. This switch disconnects alarm circuitry.
5	Set RF GAIN control (20) fully counterclockwise.	No indications.

NOTE

The transmitter is equipped with protective overload circuitry incorporated in meters on the transmitter. If an overload occurs in either the PA PLATE current, PA SCREEN current, IPA plate current or at the transmitter output in the form of excessive vswr, the corresponding meter face will light to indicate an overload has occurred in that circuit of the transmitter. Also, each of these meters has an overload indicator that can be adjusted to trip at a value set by the operator.

<u>STEP</u>	<u>OPERATION</u>	<u>NORMAL INDICATIONS</u>
6	Adjust the OVERLOAD INDICATOR (adjustment screw located directly below each meter face) on each meter for the following:	
	PA PLATE current	3-1/2 amperes
	PA SCREEN current	80 ma
	IPA plate current	800 ma
	REFLECTED power	as desired
7	Select band by holding BAND-SWITCH control (7) first to left until a PA band indicator (12) lights, then holding BAND-SWITCH control to the right until the next PA band indicator lights. Continue this operation until the associated band indicator lights for the desired operating frequency.	PA band indicator (12) lights to indicate PA frequency band selected.

NOTE

The transmitter contains four preset average output power levels which are adjustable and selected at the front of the transmitter. Before applying excitation to the transmitter one of the four preset power levels should be selected. (to calibrate the four levels, refer to the HFL-10K Appendix B). With the power properly calibrated they are automatically adjusted from the internal ALDC circuits. In power level 1, the transmitter will tune to 3 kw, in power level 2 it will tune to 5 kw, in power level 3 it will tune to 8 kw, and in power level 4 the transmitter will tune to 10 kw. When tuning the transmitter manually, the ALDC circuit remains activated and will limit the transmitter power output in accordance with the power level selected, corresponding to the desired power output.

TABLE 3-1. MANUAL TUNING PROCEDURE (cont)

<u>STEP</u>	<u>OPERATION</u>	<u>NORMAL INDICATIONS</u>
*8	Remove bias control cover on IPA drawer to expose bias adjust potentiometers (PA BIAS, IPA BIAS and 2ND AMP BIAS)	
* These steps are not part of the normal operating procedure, and should only be performed periodically in the order indicated.		
9	Press HIGH VOLTAGE switch (10) to light indicator. (It may be necessary to press HIGH VOLTAGE switch twice).	HIGH VOLTAGE switch lights when high voltage is on.
*10	Adjust PA BIAS control for an indication of 0.75 ampere on the PA PLATE CURRENT meter (2).	PA PLATE CURRENT meter indicates quiescent current of 0.75.
*11	Adjust IPA bias control for an indication of 210-230 ma on IPA plate current meter (19).	IPA plate current meter (19) indicates quiescent current of 210-230 ma.
*12	Hold PLATE METER switch (18) up and adjust 2ND AMP BIAS control for an indication of 220-240 ma.	IPA plate current meter (19) indicates IPA quiescent current of 200-240 ma when PLATE METER switch is in 2ND AMP position.
*13	Replace bias control cover, press HIGH VOLTAGE switch (10) to remove high voltage, and extend IPA drawer out on its chassis tracks to expose 1ST AMP BIAS control.	HIGH VOLTAGE indicator goes out and PLATE meters indicate zero.
*14	Pull IPA drawer interlock shaft outward to defeat interlock, and press HIGH VOLTAGE switch (10) to apply high voltage.	HIGH VOLTAGE indicator lights and PLATE meters indicate PA and IPA plate currents.

TABLE 3-1. MANUAL TUNING PROCEDURE (cont)

<u>STEP</u>	<u>OPERATION</u>	<u>NORMAL INDICATIONS</u>
*15	Set PLATE METER switch (18) to 1ST AMP position and adjust 1ST AMP BIAS control for 60-70 ma (1ST AMP BIAS control located on underside of IPA drawer). After adjustment is completed, remove high voltage, reinsert IPA drawer interlock, and push in and secure IPA drawer.	IPA plate current meter (19) indicates 60-70 ma with PLATE METER switch in 1ST AMP position.
16	Set the TEST KEY switch (35) to the up position.	
17	Set the controls on the MMX-2B exciter as follows; METER switch to RF position, CARR SUPPR switch to FULL position, ON/STANDBY switch to ON position, EXCITER ON/PTT switch to the EXCITER ON position. MODE switch to CW position, frequency selector switches to the desired carrier frequency (refer to paragraph 3-4 b.), RF OUTPUT control for an output of approximately 100 milliwatts.	MONITOR meter on the MMX-2B exciter reads approximately 2 with 100 milliwatt output.
<u>NOTE</u>		
During initial manual tuning of transmitter, r-f output power will be increased or decreased with the RF GAIN control (20).		
18	Press the HIGH VOLTAGE switch (10) to light indicator, and adjust RF GAIN control (20) clockwise slightly to cause increase in IPA plate current indication on PLATE current (19), not to exceed 300 ma.	HIGH VOLTAGE switch indicator (10) illuminates and IPA plate current (19) indicates an increase in meter reading not to exceed 300 ma.

* These steps are not part of the normal operating procedure and should only be performed periodically in the order indicated.

TABLE 3-1. MANUAL TUNING PROCEDURE (cont)

<u>STEP</u>	<u>OPERATION</u>	<u>NORMAL INDICATIONS</u>
19	Adjust IPA TUNE control (21) for a noticeable increase and peak in PA plate current indication on PA PLATE current meter (2).	The rotation of IPA TUNE control applies IPA output to PA, indicating resonance. At this point, PA PLATE current meter (2) indicates an increase in quiescent current.
<u>CAUTION</u>		
During tuning of power amplifier do not exceed a PA PLATE current meter reading of 1.5 amperes. If an overload should occur, the HIGH VOLTAGE indicator will go out. To reset high voltage, decrease r-f drive to minimum and press to light HIGH VOLTAGE indicator. (HIGH VOLTAGE switch must be pressed twice to energize high voltage).		
20	Operate PA TUNE control (11) (press control down or up in small increments), as necessary, to cause a noticeable resonant dip in PA PLATE current meter (2) indication.	PA PLATE current meter indicates resonant dip and PA OUTPUT meter (5) indicates power output.
21	Operate PA LOAD control (17) (press control + or - in small increments), as necessary, to produce a maximum reading on PA OUTPUT meter (5).	PA OUTPUT meter indicates a further increase in power output during loading process.
22	Operate the PA LOAD control (17) (Press control up or down), as necessary to cause LOAD SENSE meter (6) to indicate at or near zero reading.	PA OUTPUT meter (5) indicates highest value when transmitter is properly loaded into antenna or load.

NOTE

Proper tuning can also be accomplished by observing LOAD SENSE meter (6) for a zero to 100 reading at a level of 1kw.

TABLE 3-1. MANUAL TUNING PROCEDURE (cont)

<u>STEP</u>	<u>OPERATION</u>	<u>NORMAL INDICATIONS</u>
23	Re-adjust IPA TUNE control (21) for further increase in PA OUTPUT meter indication.	PA OUTPUT meter (5), may indicate a slight increase in meter reading.
24	Rotate RF GAIN control (20) clockwise to increase PA output power level to desired preset power level.	PA OUTPUT meter (5) indicates desired output level.
25	Set the TEST KEY switch (35) to its center or neutral position.	PA OUTPUT meter indication goes to zero.

NOTE

Upon completion of manual tuning on carrier, the transmitter is ready for operation in an intelligence mode. Exciter control positions for the various modes of operation are outlined in section 3 of the MMX-2B Appendix A section. The above outlined procedure has presented a logical sequence for manually tuning the HFT-10K/JS on a selected carrier frequency at the desired or rated average power output level. Refer to paragraph 3-8 for power output indications under multi-channel transmissions, before the reapplication of excitation to the transmitter.

3-7. AUTOMATIC TUNING PROCEDURE

The automatic tuning procedure (carrier only) for the HFT-10K/JS transmitter is outlined in table 3-2.

TABLE 3-2. AUTOMATIC TUNING PROCEDURE (CARRIER ONLY)

<u>STEP</u>	<u>OPERATION</u>	<u>NORMAL INDICATIONS</u>
1	Set MAIN POWER circuit breaker (30) and EXCITER ON/OFF (31) switch to the ON positions.	All transmitter blowers operate. TECHNIMATIC light (31), PA band indicator (2) and POWER level indicator (14) light.

TABLE 3-2. AUTOMATIC TUNING PROCEDURE (cont)

<u>STEP</u>	<u>OPERATION</u>	<u>NORMAL INDICATIONS</u>
2	Set SCREENS circuit breakers (33) to ON.	INTERLOCKS indicator (8) lights (provided that all safety interlocks are closed and the time delay cycle has been completed).
3	Set ALARM ON/OFF switch (34) to OFF position.	If ALARM ON/OFF switch had been in the ON position with high voltage removed, the audible high voltage alarm would be on. This switch disconnects high voltage alarm circuitry.
4	Set the MAN/AUTO switch (9) to the AUTO position.	Automatic tuning circuitry is enabled.,
5	Set the controls on the MMX-2B exciter as follows: METER switch to RF position, CARR SUPPR switch to FULL position, ON/STANDBY switch to ON position, EXCITER ON/PTT switch to the EXCITER ON position, MODE switch to CW position, frequency selector switches to the desired carrier frequency (refer to paragraph 3-4 b), RF OUTPUT control for an output of approximately 100 milliwatts (reading of about 2 on the MONITOR meter).	On the MMX-2B the POWER indicator should illuminate and the MONITOR meter should read approximately 2. The bandswitches in the IPA and PA sections should position automatically; the proper bandswitch indicator (12) for the band including the selected carrier frequency, should illuminate.
6	Select the desired output power level with POWER ADJ switch (15). When POWER ADJ switch is in the up position, one of four pre-set power levels is selected.	The POWER level indicator (14) illuminates to indicate the power level selected. (the levels are fully adjustable and can be set by the operator; refer to section 5 of the HFL-10K, Appendix B for information pertaining to power level adjustments.)
*7	Set the MAN/AUTO switch (9) to the MAN position.	Automatic tuning circuitry is disabled.
* NOTE: These steps are not a part of the normal operating procedure and should only be performed periodically in the order indicated.		

TABLE 3-2. AUTOMATIC TUNING PROCEDURE (cont)

<u>STEP</u>	<u>OPERATION</u>	<u>NORMAL INDICATIONS</u>
*8	Ensure that the RF GAIN CONTROL (20) is set for minimum (fully counterclockwise), and press the HIGH VOLTAGE switch (10) to light indicator. (It may be necessary to press the HIGH VOLTAGE Switch twice.)	HIGH VOLTAGE switch indicator (10) illuminates. The following meter indications should be observed: PA plate current = 0.75 amperes, IPA plate current = 210-230 ma; 2ND AMP plate current = 200-240 ma; 1ST AMP plate current = 60-70 ma. (Plate current for the 1ST and 2ND AMP's will be indicated on PLATE METER (19) with PLATE METER switch (18) in the respective positions.)
<u>NOTE</u>		
If the values for quiescent current in step 8 are not met, refer to steps 8 thru 15 of the manual procedure, Table 3-1, for setting bias controls.		
*9	Press HIGH VOLTAGE switch (10) to remove high voltage, and set the MAN/AUTO switch (9) to the AUTO position.	HIGH VOLTAGE switch indicator (10) will go out. Automatic tuning circuitry will be enabled.
10	Press HIGH VOLTAGE switch (10) to light indicator and press TUNE switch (16).	High voltage is applied to transmitter and automatic tuning takes place. At the completion of the automatic tuning cycle, READY indicator (16) lights indicating transmitter tuning completed at a power output level selected by operator.
11	Set ALARM ON/OFF switch (34) to ON position.	Alarm is now armed.

NOTE

The transmitter automatic tuning should be completed in approximately 10 seconds; however, incorrect control settings can cause excessive tuning time resulting in a fault indication. If the FAULT indicator (13) lights, check for correct band indication and excitation level before depressing TUNE/READY switch again. If the FAULT indicator lights again, refer to the HFL-10K Appendix B for automatic-tuning adjustment procedures.

- * These steps are not a part of the normal operating procedure, and should only be performed periodically in the order indicated.

NOTE

Upon completion of automatic tuning on carrier, the transmitter is ready for operation in an intelligence mode. Exciter control position for the various modes of operation are outlined in section 3 of the MMX-2B, Appendix A. This procedure has outlined the logical sequence for automatically tuning the HFT-10K/JS on a selected carrier frequency at the desired or rated average power output level. Refer to paragraph 3-8 for power output indications under multi-tone, multi-channel transmissions, before the reapplication of excitation to the transmitter.

CAUTION

The aforementioned procedure outlines carrier automatic tuning. However, once the exciter has been adjusted for the desired type of intelligence and emission mode, the reapplication of r-f drive from the exciter must be carefully adjusted to avoid exceeding the PEP rating of the transmitter. Figure 3-1 illustrates the relationship between peak and average power in graphic form under multitone condition.

3-8. AVERAGE POWER OUTPUT INDICATIONS

When two tones of equal amplitudes are supplied to a single sideband system, the ratio of PEP to average power is 2:1. This relationship is valid for two tones only. Thus, it is apparent that when two tones of equal amplitude are applied to the transmitter, the average power will be 5 kw when PEP is 10 kw.

NOTE

PA OUTPUT meter indicates average power only. As an option, TMC offers a peak envelope power meter which indicates PEP and average power.

In multichannel, multitone transmission modes where more than two tones are used, a definite relationship exists between the average power as indicated on the PA OUTPUT meter and peak envelope power developed. A chart in graphic form (figure 3-1) indicates the average power meter readings as a function of tones. The graph already contains the correction factor required when measuring multitone envelopes with an average reading meter (5 Kw average reads approximately 4.1 Kw).

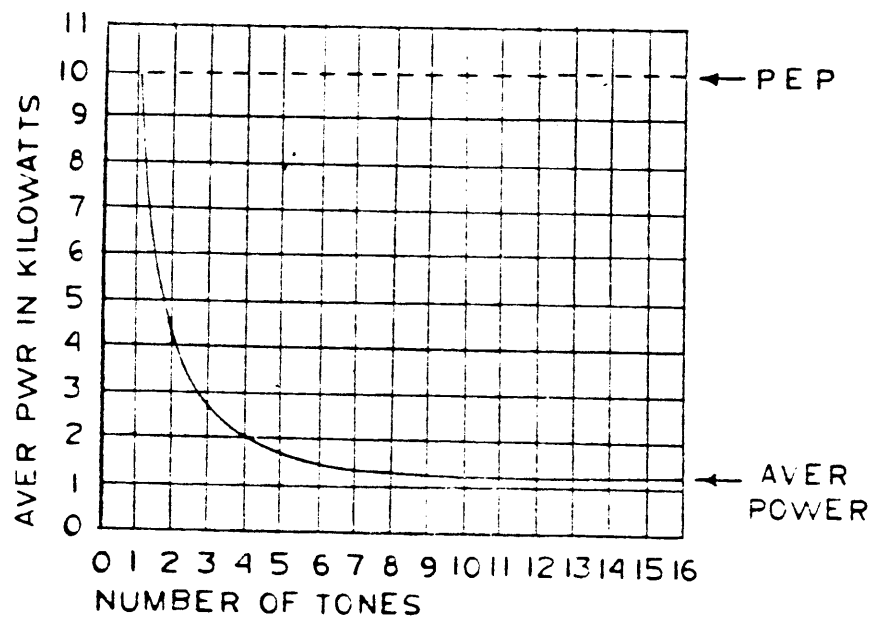


Figure 3-1. Ratio Average Power and PEP as a Function of Tones

SECTION 4

PRINCIPLES OF OPERATION

4-1. OVERALL BLOCK DIAGRAM ANALYSIS

Figure 4-1 is an overall block diagram of the HFT-10K which consists of an MMX-2B Multi-Mode Exciter driving an HFL-10K Linear Power Amplifier. The MMX-2B provides at least 100 milliwatts of r-f power to the HFL-10K within the operating range of 2 to 30 MHz in any one of the following modes: AM, AME (carrier reinserted), SSB, ISB, CW, FSK, or FAX. The HFL-10K provides linear amplification of the r-f output and provides 10 kilowatt PEP within the operating frequency range of the transmitter. The transmitter r-f is applied to a transmitting antenna which matches the 50 ohm output impedance of the HFT-10K/JS.

The HFL-10K provides an ALDC (automatic load and drive control) feedback voltage to the MMX-2B which prevents the r-f output of the transmitter from exceeding a preset level. The ALDC circuit in the MMX-2B automatically compensates for high modulation peaks and load changes, providing a relatively constant output level, in addition to limiting distortion and improving linearity.

Primary power, 208 VAC 400 Hz, 230 VAC 60 Hz is applied to the HFL-10K; power for the MMX-2B is obtained via a 230 VAC 60 Hz source.

4-2. FUNCTIONAL ASSEMBLY SECTIONS

Refer to the Appendix A and B for detailed principles of operation for the MMX-2B Multi-Mode Exciter and the HFL-10K High Frequency Linear Power Amplifier.

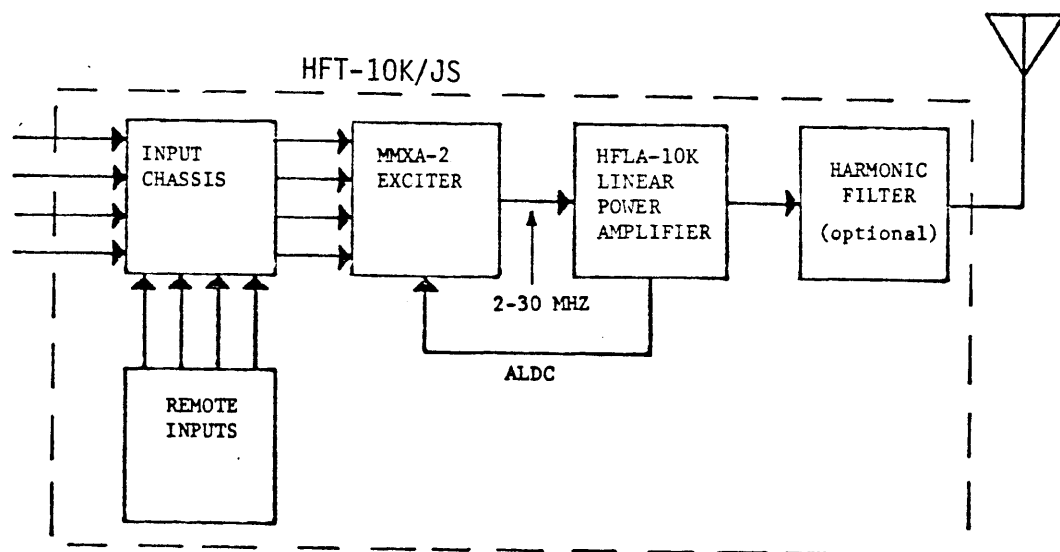


Figure 4-1. Functional Block Diagram

SECTION 5

MAINTENANCE AND TROUBLESHOOTING

5-1. INTRODUCTION

The HFT-10K/JS has been designed for long term, trouble-free operation. When it becomes necessary to perform alignment and/or adjustments to the equipment, it is recommended that technicians perform the necessary operations outlined in Appendix A and B of HFL-10K and MMX-2B. The following maintenance aids are provided for troubleshooting and replacement of parts.

- a. Overall block diagram (Section 4; Figure 4-1)
- b. Component location diagram (Figure 5-6)

5-2. TEST EQUIPMENT REQUIRED

Table 5-1 lists the test equipment required for maintaining and troubleshooting the transmitter. Refer to the MMX-2B and HFL-10K Appendices A and B for additional equipment required to maintain and troubleshoot these two components.

TABLE 5-1. TEST EQUIPMENT REQUIRED

Signal Generator	Hewlett-Packard Model 606A, or equivalent
VTVM	Hewlett-Packard Model 410B, or equivalent
Multimeter	Simpson Model 260, or equivalent
Oscilloscope	Tektronix, Model 541A, or equivalent

5-3. OPERATOR'S MAINTENANCE PROCEDURE

- a. Refer to transmitter operating procedure (paragraphs 3-6 and 3-7)
- b. Refer to troubleshooting (paragraph 5-5)
- c. Refer to maintenance procedures described in the HFL-10K and MMX-2B, Appendices A and B.

5-4. PREVENTIVE MAINTENANCE

In order to prevent equipment failure due to dust, dirt or other destructive elements, it is suggested that a schedule of preventive maintenance be

set up and adhered to. At periodic intervals, the equipment should be pulled out on its sides for internal cleaning and inspection.

The wiring and all components should be inspected for dirt, dust, corrosion, grease or other harmful conditions. Remove dust with a soft brush or vacuum cleaner. Remove dirt or grease with any suitable cleaning solvent. Use of carbon tetrachloride should be avoided due to its highly toxic effects. Trichloroethylene or methyl chloroform may be used, providing the necessary precautions are observed. For detailed preventive maintenance procedures, refer to the applicable HFL-10K and MMX-2B, Appendicies A and B.

WARNING

WHEN USING TOXIC SOLVENTS, MAKE CERTAIN THAT ADEQUATE VENTILATION EXISTS. AVOID PROLONGED OR REPEATED BREATHING OF THE VAPOR. AVOID PROLONGED OR REPEATED CONTACT WITH SKIN. FLAMMABLE SOLVENTS SHALL NOT BE USED ON ENERGIZED EQUIPMENT OR NEAR ANY EQUIPMENT FROM WHICH A SPARK MAY BE RECEIVED. SMOKING, "HOT-WORK", ETC. IS PROHIBITED IN THE IMMEDIATE AREA.

CAUTION

When using trichloroethylene, avoid contact with painted surfaces, due to its paint-removing effects.

5-5. TROUBLESHOOTING

Troubleshooting the HFT-10K/JS consists of isolating faults to either the MMX-2B Exciter or the HFL-10K Power Amplifier. Refer to the Appendicies A and B for detailed troubleshooting procedures of the MMX-2B and HFL-10K. Refer to operator's section in Appendicies A and B for normal indications.

a. Disconnect the MMX-2B r-f output from the HFL-10K and connect the MMX-2B to a 50 ohm 1 watt, non inductive dummy load. Use an oscilloscope to monitor the exciter output, referring to the MMX-2B Appendix A for normal indications.

b. Use an ohmmeter to check for continuity of interconnect cabling between the MMX-2B and HFL-10K.

c. Disconnect the MMX-2B and connect a signal generator to the HFL-10K input. Operate the HFL-10K into a dummy load (if available) and monitor the HFL-10K meters for proper operation. (Refer to paragraphs 3-6 and 3-7 and HFL-10K Appendix B for normal indications.)

d. Four (4) maintenance programs are listed for the purpose of assisting in troubleshooting and maintenance of the transmitter. These programs along with the maintenance data supplied in Section 5 of Appendices A and B will cover some of the possible difficulties encountered in maintaining the HFT-10K/JS Transmitter.

These charts or programs do not list all possible difficulties, however, they can be used as a starting point to isolate a particular malfunction. To use the charts, follow these instructions:

1. Determine the nature of the trouble.
 2. Find the programs which describes it most completely (refer to program list).
 3. Follow the arrow from that block to the first suggested fault. INVESTIGATE.
 4. If no trouble is found, follow the arrow to the next fault suggested. INVESTIGATE.
 5. If trouble is only partially corrected, find the block which most nearly describes the remaining trouble. INVESTIGATE.
5. Proceed as in Line 3 above.

MAINTENANCE PROGRAM LIST

Maintenance Program "A" IPA Plate Meter reading abnormal.

Maintenance Program "B" 2ND IPA Plate Meter reading abnormal.

Maintenance Program "C" No. HV.

1. Main Blower does not operate.
2. Bandswitch and Interlock lamps out.

Maintenance Program "E" Interlock Lamp does not light.

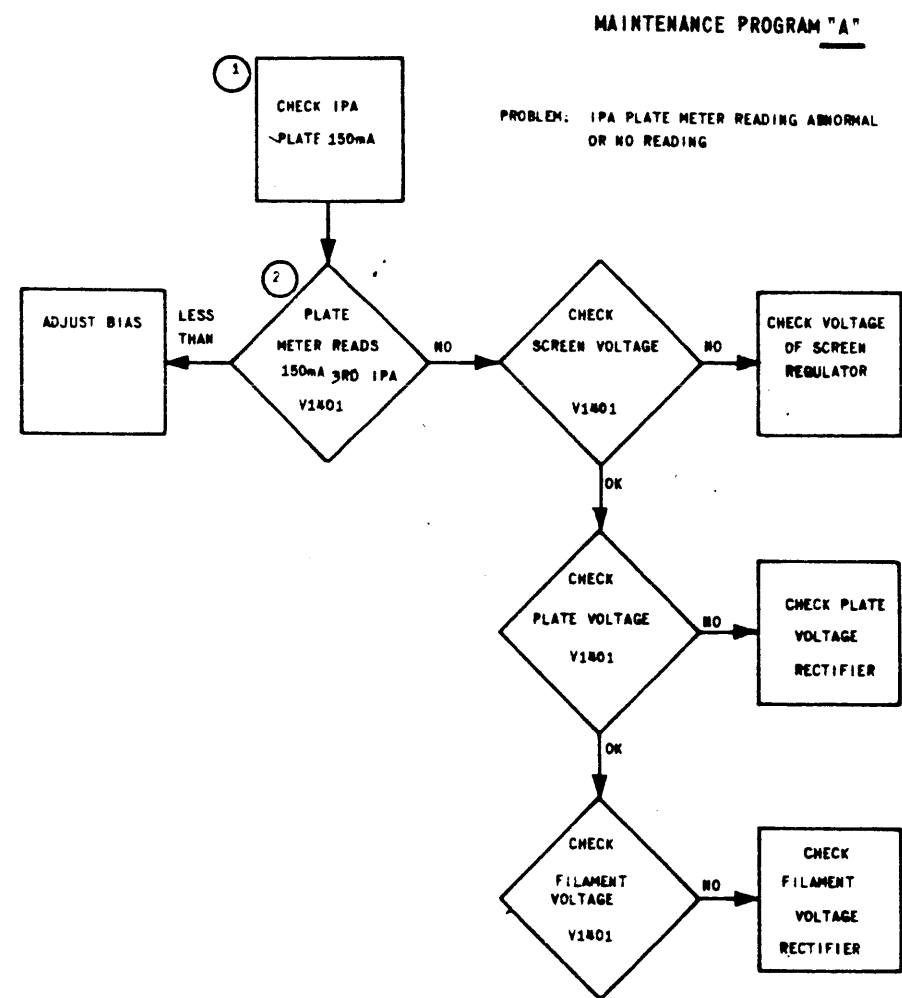


Figure 5-1. Troubleshooting Chart "A"

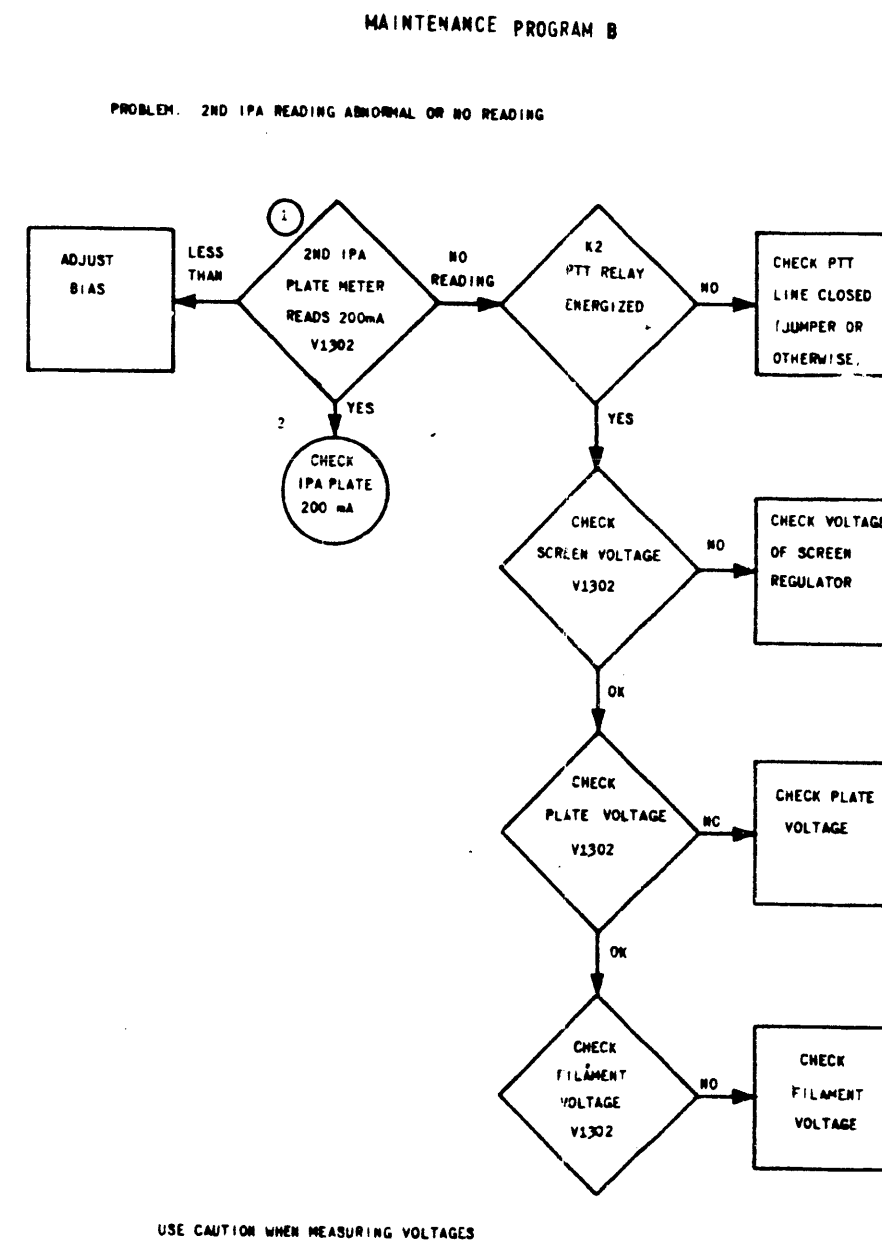


Figure 5-2. Troubleshooting Chart "B"

MAINTENANCE PROGRAM C

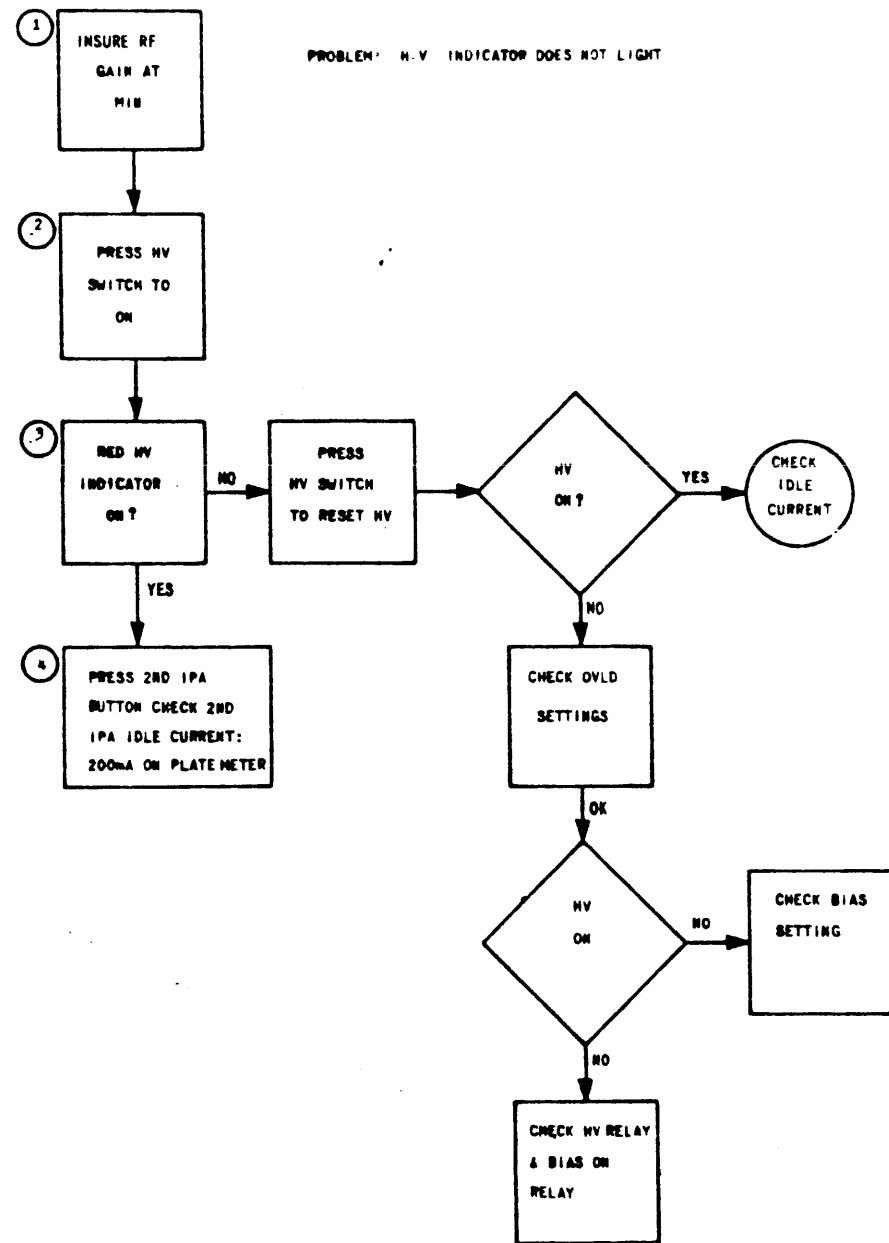


Figure 5-3. Troubleshooting Chart "C"

MAINTENANCE PROGRAM "E"

PROBLEM INTERLOCK LAMP DOES NOT LIGHT

NOTES

- 1 24VDC APPLIED TO BIAS ON RELAY VIA INTERLOCK AND TIMER CIRCUIT
- 2 BIAS RELAY ENERGIZES PROVIDING VOLTAGE PATH FOR R801. R801 ENERGIZES PROVIDING VOLTAGE PATH TO INTERLOCK LAMP VIA HEAT OVLd AND EXTERNAL INTERLOCK


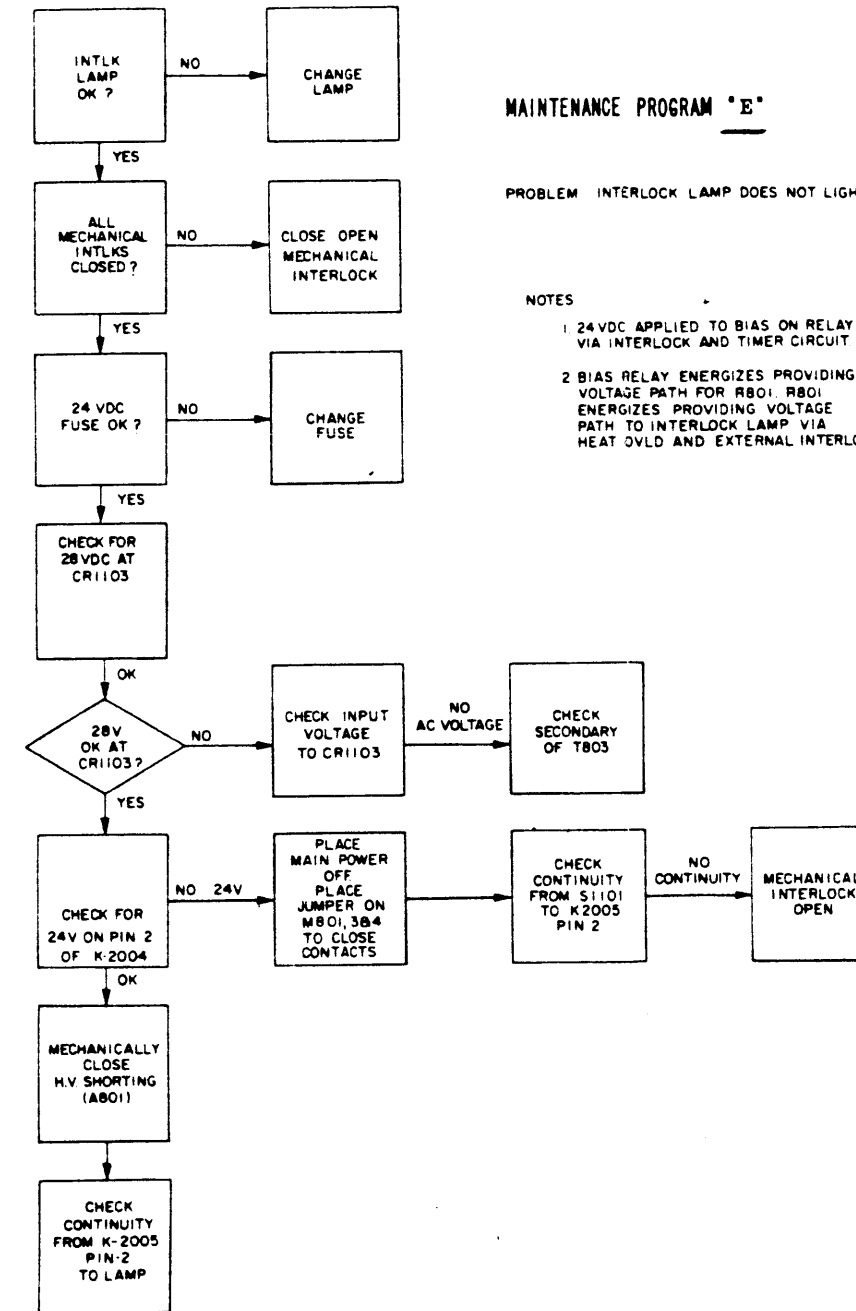


Figure 5-4. Troubleshooting Chart "E"

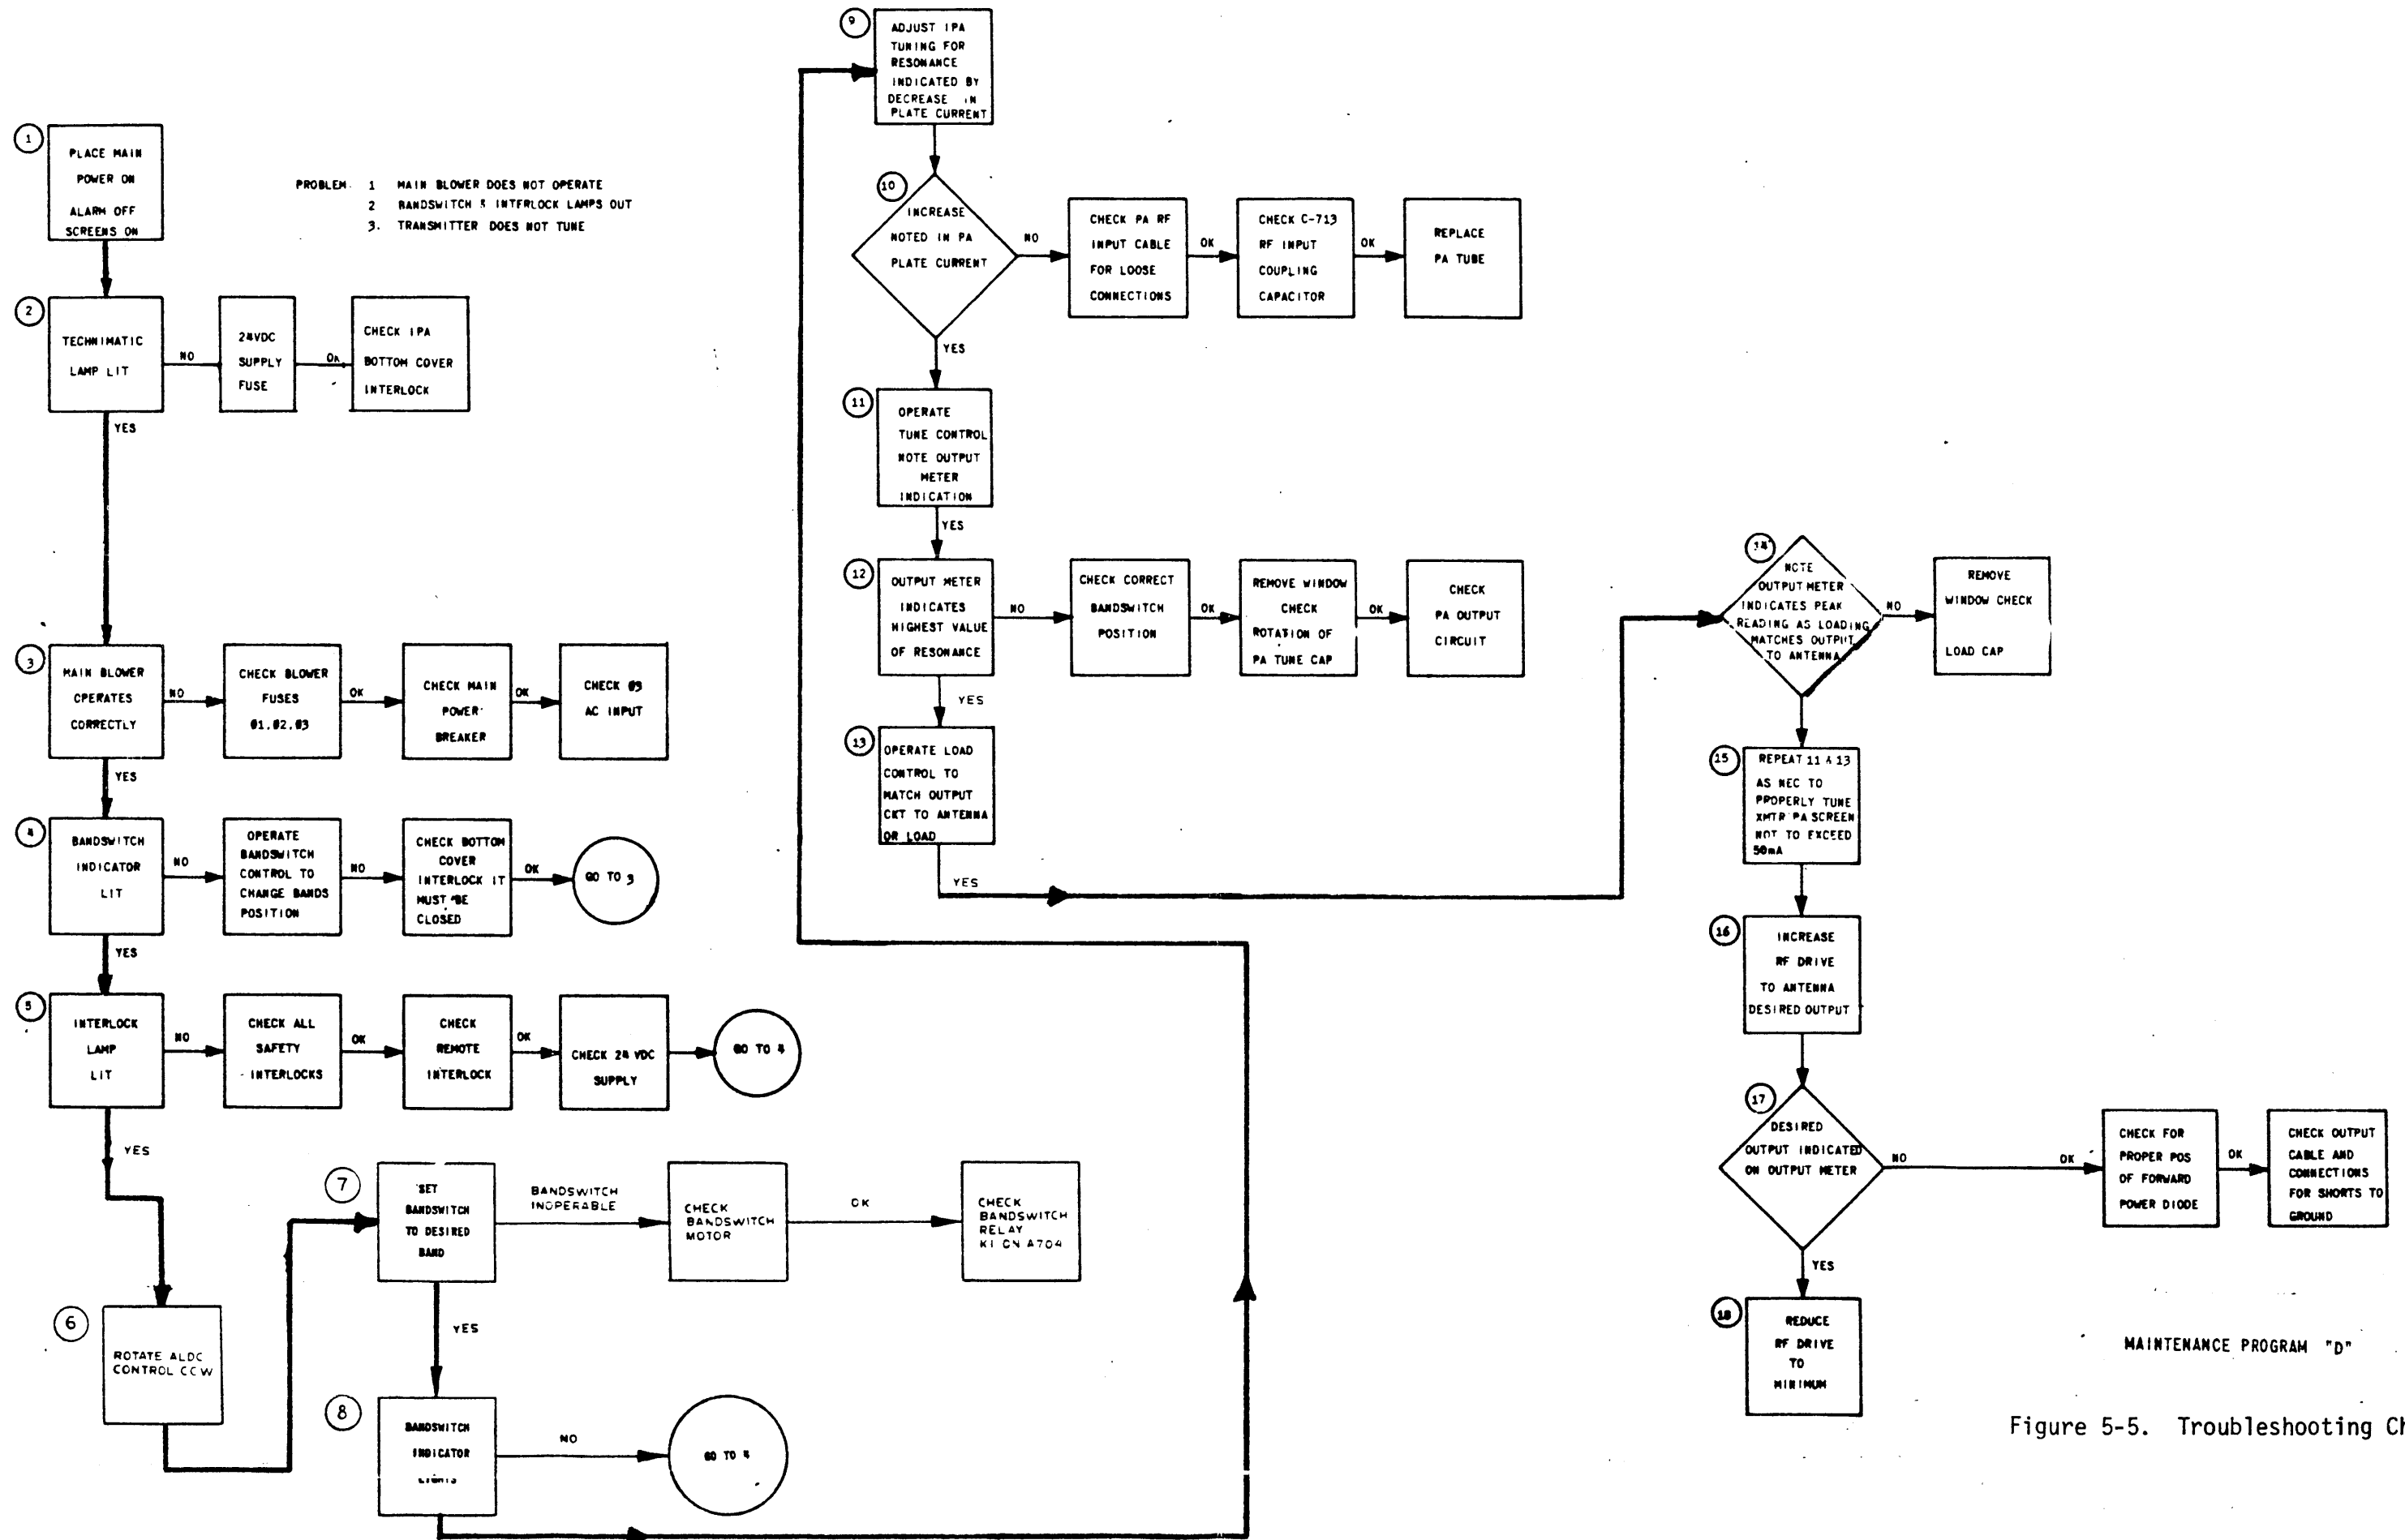

MAINTENANCE PROGRAM "D"

Figure 5-5. Troubleshooting Chart "D"

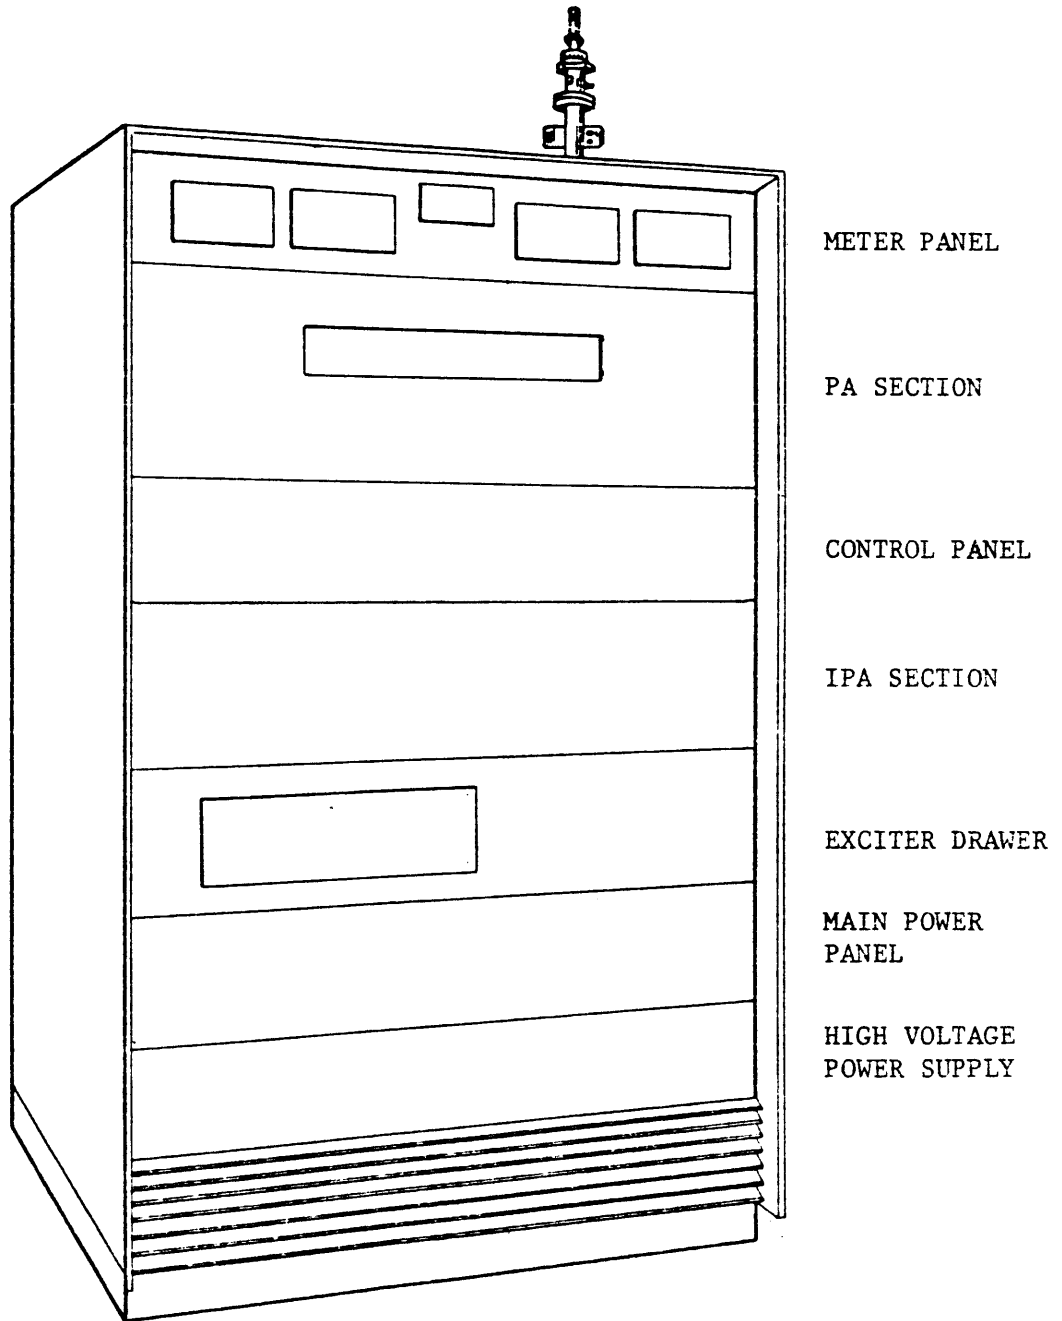


Figure 5-6. Component Location Diagram, HFT-10K/JS